

Art 7

Media Equipment Guide



LAPTOP & PROJECTOR OPERATION



1. Use remote control to turn on projector
(Allow 30-60 sec. to warm up)
2. Connect projector cable to laptop
(Located on the desk)
3. Turn on laptop
4. Pull down screen to desired length
5. Select "Comp2" button on remote control to switch to the computer input
6. If picture does not appear on projector and laptop screen follow step 7
7. On your Laptop Press Fn & the F-Key (F1-F12) with a monitor symbol on it simultaneously

Please allow several seconds for synchronization
Repeat step 7 until image appears on both screens

DVD/VHS PLAYER OPERATION



1. Use remote control to turn on projector
2. Turn on the DVD/VHS player (Located below the desk)
3. Pull down screen to desired length
4. Select "VIDEO" button on projector remote control
5. Play DVD or VHS video (Use remote control or buttons on player)
6. To adjust the volume, use the projector remote control

AUDIO CD PLAYER OPERATION



1. Insert Audio CD into the DVD slot of the DVD/VHS player
2. Use remote control to turn on projector
(Allow 30-60 sec. to warm up)
3. Select "VIDEO" button on projector remote control
4. Play Audio CD (Use remote control or buttons on player)
5. To adjust the volume, use the projector remote control

If you experience any problems or need assistance please call **x5050**