

Duke 218

Media Equipment Guide



Control Panel

LAPTOP & PROJECTOR OPERATION



1. **Use control panel to turn on projector**
(Allow 30-60 sec. to warm up)
2. **Connect projector cable to laptop**
(Pull down shelf and cable is located in the bottom of the compartment)
3. **Turn on laptop**
4. **Select "Laptop" option on control panel**
5. **If picture does not appear on projector and laptop screen follow step 6**
6. **On your Laptop Press Fn & the F-Key (F1-F12) with a monitor symbol on it simultaneously**

Please allow several seconds for synchronization

Repeat step 6 until image appears on both screens

DVD/VHS PLAYER OPERATION



1. **Use control panel to turn on projector** (Allow 30-60 sec. to warm up)
2. **Turn on the DVD/VHS player** (Located in the pull down shelf)
3. **Select "VCR" option on control panel**
4. **Play DVD or VHS video** (Use remote control or buttons on player)
5. **To adjust the volume, use the control panel**

If you experience any problems or need assistance please call **x5050**