

Marshburn Group Study Room 110

Media Equipment Guide

TELEVISION WITH VHS PLAYER COMBO & DVD PLAYER



VHS INSTRUCTIONS:

1. Turn TV on
2. Insert VHS
3. Press play button

DVD PLAYER INSTRUCTIONS:

1. Turn TV on
2. Turn DVD deck on
3. Insert DVD
4. Press play button to play DVD
5. Use the "menu/clear" button on the remote control to navigate to the DVD menu
6. If TV is not receiving signal, make sure TV is set to either "Input 1/2" or channel 3 or 91.

(Depending on the TV model, one of these TV setting should work)

If you experience any problems or need assistance please call **x5050**